

# 120SCS CAULK




Below are details for the SEQUENCE and method of caulking the edge of the channel and adjacent tile

## Step 1

NOTE, this sequence should be completed BEFORE the shower screen is mounted.

Tape over holes with 12mm removable tape. Tape applied in-factory must be removed within 30 days.

Caulk channel edges to tile (both sides)

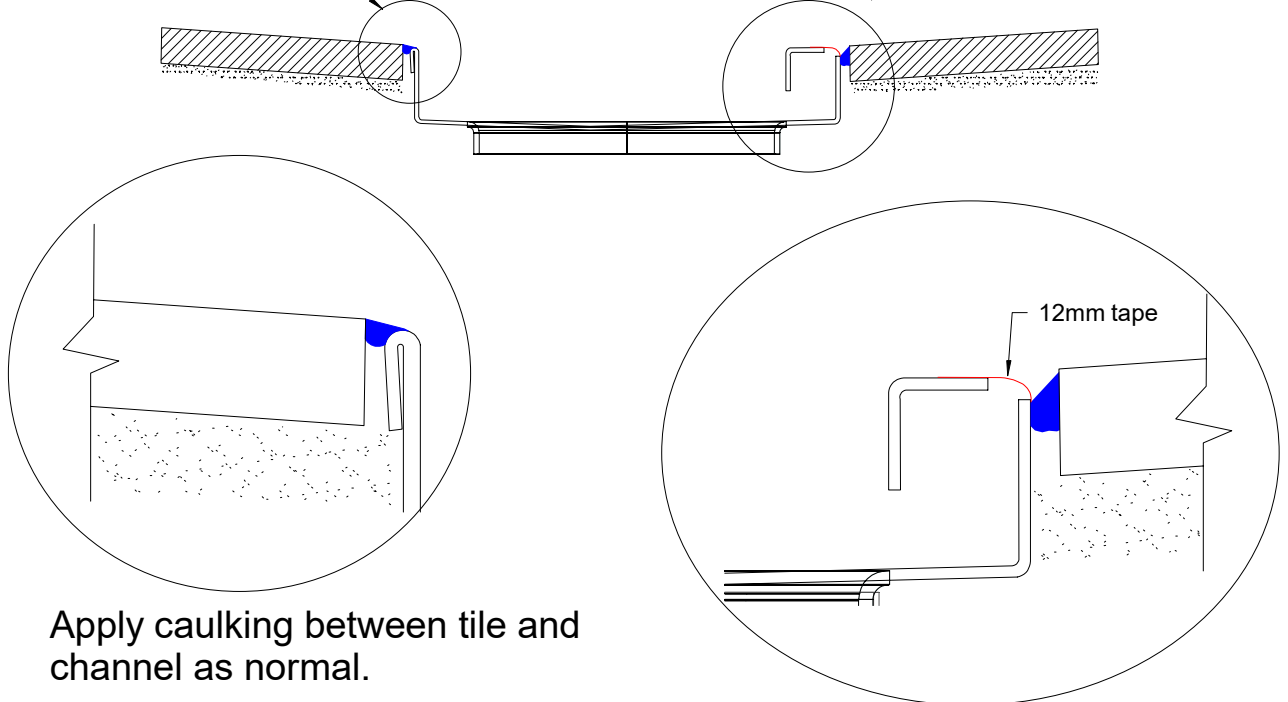

Apply caulking between tile and channel as normal.

Apply caulking between tile and channel. Any caulk covering tape or drainage holes can be removed by either removing tape, or gently combing caulk off holes. Any holes covered can be opened later with a 'box cutter' style knife. Ensure tape is removed before caulk cures.

## Step 2

Mount the shower screen.  
As with Step1 ensure the drainage holes are left clear of caulk.  
NOTE, any holes covered can be opened by gently combing caulk off holes.  
Once caulk is cured any holes covered can be opened by gently cutting caulk away from each hole.

